

# FORD MOTOR COMPANY

DEARBORN, MICHIGAN  
PRINTED IN U.S.A.

1957



FORD

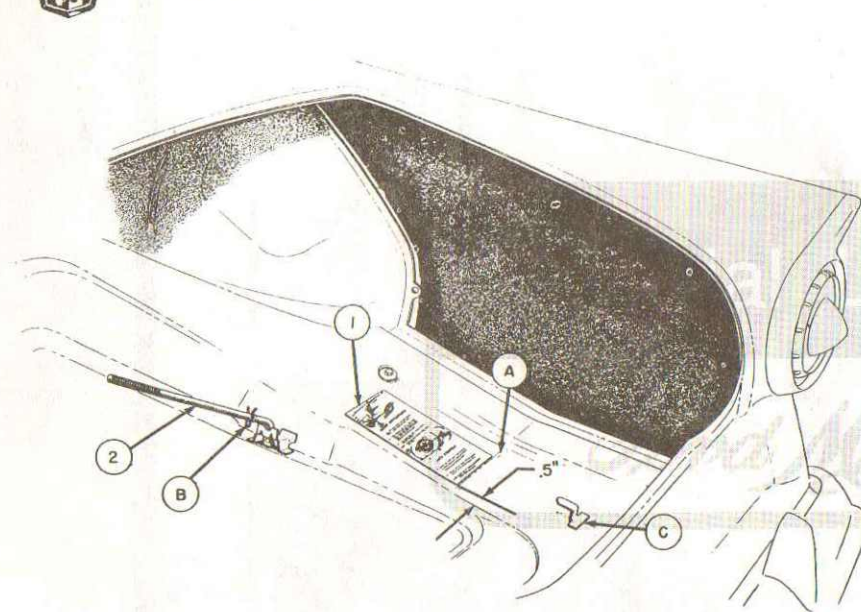


FIGURE-1


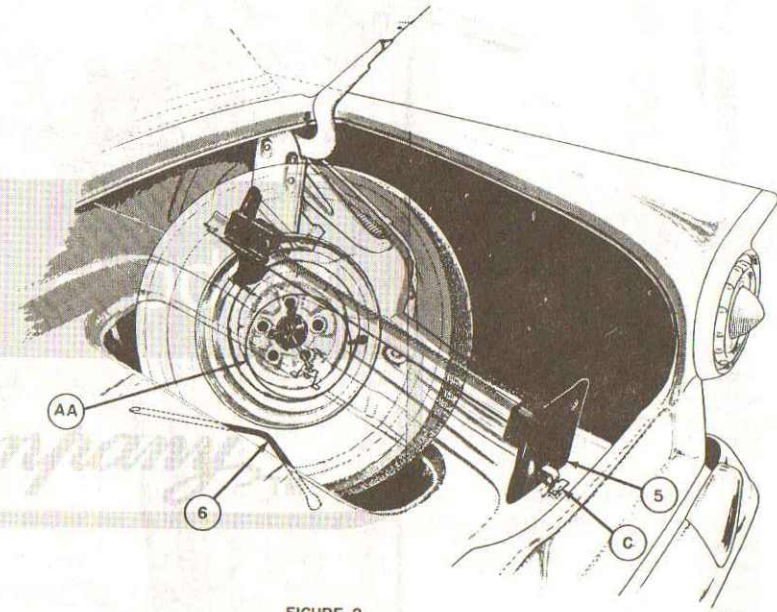


FIGURE-2

## INSTALLATION-BUMPER JACK STOWAGE AND APPLICATION OF LABEL MODELS BAC-57-58-63-64-70-73-76

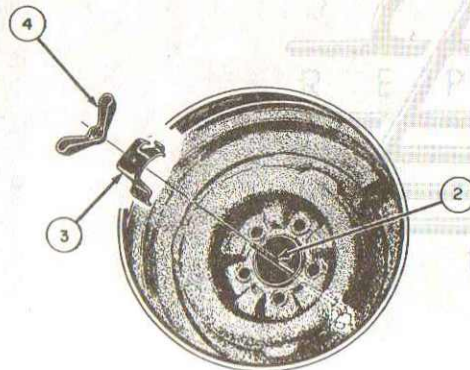

VIEW-AA

- 1 (17087) LABEL - JACK INSTRUCTIONS.  
NOTE: REMOVE PROTECTIVE BACKING AND APPLY LABEL TO LUGGAGE COMPARTMENT FLOOR PANEL TO DIMENSION SHOWN IN FIGURE 1. LOWER EDGE OF LABEL IS LOCATED ALONG CREASE LINE OF FLOOR PANEL AS ILLUSTRATED, SEE ITEM "A".
- 2 (BN-1448) BOLT - SPARE WHEEL MOUNTING, PLACED IN POSITION THROUGH HOLE IN 3" MOUNTING BRACKET AND SECURED WITH THE FOLLOWING ITEM:  
B - (74274-8) RETAINER SPRING.
- 3 (BAC-1446) CLAMP - SPARE WHEEL HOLD DOWN.
- 4 (BA-1457) NUT - SPARE WHEEL MOUNTING BOLT - WING.
- 5 (17080) BUMPER JACK ASSEMBLY, INSERT BASE OF JACK ASSEMBLY OVER CLIP ON FLOOR PAN AS SHOWN BY ITEM "C" IN FIGURE 2 AND PLACE JACK ASSEMBLY AGAINST INNER WHEEL HOUSE PANEL IN POSITION SHOWN. PLACE SPARE WHEEL INTO TIREWELL, ALLOWING BOLT, ITEM 2, TO EXTEND THROUGH HUB OPENING. SECURE SPARE WHEEL AGAINST JACK ASSEMBLY AND TIREWELL WITH CLAMP AND WING NUT AS SHOWN IN FIGURE 2.  
NOTE: TOP OF SPARE WHEEL HOLD DOWN CLAMP MUST BE HOOKED INTO FLANGE OF HUB OPENING ON SPARE WHEEL AS SHOWN IN FIGURE 2.
- 6 (51A-17035) WRENCH, PLACED BETWEEN SPARE WHEEL AND TIREWELL AS SHOWN IN FIGURE 2.